

Folding DIGITAL THERMOMETER HK0356

Congratulations on purchasing a HARK Folding Digital Thermometer!

INSTALLATION

- Open the battery compartment on the bottom of the thermometer [do not force open].
- Insert 1 x AAA 1.5v battery. Negative terminal first.
- Close the battery cover.

OPERATION

- Press On / Off button to power up the thermometer.
- Press °C / °F to change temperature unit.
- Open up the probe to the desired angle.
- Probe into fleshiest part of meat, avoiding gristle and bone. Allow temperature to stabilise to show correct reading.

Data Hold

- Press the HOLD button (on the side of the thermometer) to keep the current reading displayed.
- Press the HOLD button again to resume normal operation.

Reading Memory - Maximum & Minimum

- Press the MAX/MIN button. The MAX icon will appear on screen and the maximum temperature reading previously taken will display on the screen.
- Press the MAX/MIN button again. The MIN icon will appear on screen and the minimum temperature reading previously taken will display on the screen.
- Press the button again to resume normal operation.
- To reset the memory, press and hold the MAX/MIN button for 4 seconds. Always reset the memory before taking new readings to ensure the max/min reading are accurate.

CARE

- Do not leave thermometer in meat while cooking.
- Clean the probe immediately after each measurement to avoid cross contamination. Wipe clean with a damp cloth. Do not immerse thermometer in water.
- When the display becomes dim replace the battery.
- Do not operate in environmental temperatures lower than 0°C / 32°F otherwise incorrect reading or thermometer damage may result.
- If the appliance ceases to function correctly, press and hold the RESET button (situated on the back of the appliance) using a pointed instrument.