

WARRANTY

This LIMITED WARRANTY covers defects in workmanship and materials for a period of two years from date of first retail purchase. During the warranty period, GMG Products LLC (dba Green Mountain Grills) will replace or repair, at its sole option, any defective Green Mountain grill returned to us, or to one of our dealers, by its original purchaser.

This warranty does not cover problems that result from abuse, accident, misuse, or problems with electrical power. It does not cover uses not in accordance with the instruction manual. It does not cover commercial use of the product. It specifically excludes products for which Green Mountain Grills has not received payment.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS WHICH MAY VARY FROM STATE TO STATE (PROVINCE TO PROVINCE IN CANADA). GREEN MOUNTAIN GRILLS' RESPONSIBILITY FOR DEFECTS IN MATERIAL AND WORKMANSHIP SHALL BE LIMITED TO REPAIR AND/OR REPLACEMENT AS SET FORTH IN THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES AND WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

WE DO NOT ACCEPT LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR FOR ANY THIRD-PARTY CLAIMS FOR DAMAGES AGAINST THE RETAIL PURCHASER OF THIS PRODUCT. SOME STATES (PROVINCES IN CANADA) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS MAY NOT APPLY TO YOU.

To exercise your rights under this warranty, contact the dealer from whom you purchased it, or call us at 530-347-9167.



© 2013 GMG Products LLC All Rights Reserved



GREEN MOUNTAIN PELLET GRILLS

ASSEMBLY AND OPERATING MANUAL DAVY CROCKETT MODEL





Congratulations and thank you for purchasing GMG's award-winning Davy Crockett model pellet grill!



ASSEMBLY


Tools you will need: 10 mm wrench or adjustable wrench.



A Use 2 people to remove grill from box and fold legs into position.



B Bolt the chimney into position. Rain cap always open when cooking.

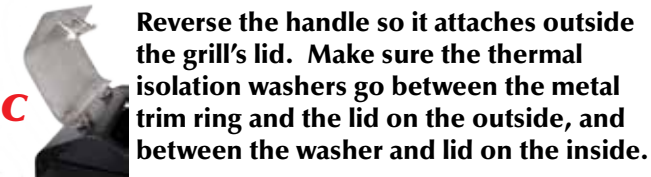

C Reverse the handle so it attaches outside the grill's lid. Make sure the thermal isolation washers go between the metal trim ring and the lid on the outside, and between the washer and lid on the inside.



Charge the firebox by pouring in the contents of the Zip-Lock bag. **D**



E Insert the heat shield. (Large holes to the left.)



F Insert the bottom half of the grease tray. (Half-moon cutout to the left.)



G Insert the top half (slider) of the grease tray.* (Slider handle to the right.)



H Install the grates.



I Hang the grease pail on the right side of the grill.

*With the slider holes open, direct flame will contact your food. Holes should be opened only at temps of 350+. Adjust grilling technique accordingly. With holes open, digital temperature readout will be inaccurate. Ambient conditions may affect grill temperatures, holes open or not.

Fill the hopper with pellets, and you can now use your new grill.

RECIPES AND CONTACT INFO AT www.greenmountaingrills.com

OPERATION



You can power your grill three different ways: 1) plug one end of the vehicle adapter (A) into the back of the grill and the other into a vehicle's lighter/cell phone connector; OR 2) connect A and B, and plug the adapter end into the back of the grill and connect the alligator clips to a 12-volt battery (red to positive, back to negative); OR 3) plug C into D and A into D and plug C into a 110-volt wall outlet and the adapter (A) into the back of the grill. Be sure to open the rain cap.



STARTING THE GRILL

To start the grill, simply press "POWER.". The grill will slowly cycle through 0-1-2-3. When it first shows a temperature, you may use the up button to choose one other than the default of 150°. You can adjust from 150°-550°. Always close grease tray holes to start.



USING THE MEAT PROBE

Plug the adapter into the outlet on the control panel. Thread the probe through the access panel on the left side of the grill, and push it into the center of your food. Simply press "FOOD" to display the internal temperature of what you're cooking.

TURNING THE GRILL OFF

Just press "POWER" once again. It will immediately go into "FAN" mode for about ten minutes to quell the remaining fire. ALWAYS do this.

IF YOU RUN OUT OF PELLETS

If you accidentally run out of pellets *and* empty the auger tube, then you will need to re-charge the firebox as you did during "ASSEMBLY."

IN CASE OF A POWER FAILURE

You can return the grill to its prior state by pressing POWER and then holding the UP button for 10 seconds, but it will go to 150, not your set temperature.

CLEANING YOUR GRILL

Unplug everything and remove interior parts. Keep liquids away from auger tube and pellets. Remove grease regularly. Water will drain through bottom hole.

TROUBLESHOOTING

If the grill fails to light: make sure your power source has sufficient wattage. Try a different source as necessary.

If you receive the message "FAL": the grill did not light. Try again. If this persists, call GMG technical support.

Controller Codes	
LOV	Insufficient voltage to operate (<10V)
CO1	Igniter failure
CO2	Combustion fan jam or failure
CO4	Auger moto jam or failure
SEN	Sensor failure or temp >590°
FAL	Grill failed to light